

VI.5.3D-FCPRECP PROGRAM FCST HCL TECHNIQUE FCPRECP

Purpose

Technique FCPRECP sets whether actual future precipitation values (if available) or zero future precipitation values will be used in creating mean areal precipitation time series with the Function ESP BLEND-TS option (see Sections VI.3.5-DEFSEG-DEF-TS [[Hyperlink](#)] and V.2.3-ESP [[Hyperlink](#)]).

Valid values are NO (0) and YES (1).

The Global default is NO (0).

This Technique is Nonuniversal.

If the value is NO then the precipitation values are set to zero.

Form of Input

FCPRECP(integer)

where integer is a value of 0 or 1

Example

```
FCPRECP(1)  
FCPRECP
```

Future precipitation values will be used if they are available.